

USING PARENTAL CONTROL

Prevent unauthorized viewers from seeing restricted content. Follow a few steps with your remote to restrict set-top/converter access to specific channels, ratings, titles and time periods with Parental Control.



Access The Parental Control Settings:

On first entry you will need to setup and remember your new Parental Control PIN

1. Press **MENU** and use **▲** or **▼** on your remote to highlight the Parental Control preference in the Quick Settings menu.
2. Highlight "Activate Parental Control" and press **OK** to enter your PIN. If setting up your PIN for the first time, follow the instructions and note your PIN for future use.

Setup Viewing Restrictions:

Display the Parental Control options (as above) and choose the items you want to lock.

Locking Status

Turn locking on or off to lock/unlock programs using your channel, rating, time, and title locking preferences.

Change PIN

Change your PIN periodically or as needed, and only give it to those with unrestricted viewing privileges. (To change your PIN, you must first enter your existing PIN)

Locked Channels

Create or modify a set of channels to block whenever locking is on.

Locked Ratings

Create or modify a set of ratings to lock whenever locking is on.

Locked Time

Set or modify a recurring timer that blocks all programming for a specified period. This timer is activated whenever locking is on.

Hide Adult Titles

Hide adult-oriented titles/descriptions from view on the Program Guide, and other on-screen displays whenever locking is on. When enabled, NC-17 and NR-Adult programs are locked as well.

For more information regarding your service, give us a call or visit us online.

