

USING YOUR NEW REMOTE



Model: URC2025

1. Turns ON/OFF equipment used for watching cable TV
2. Used to cycle through video inputs on TV or Audio Receiver
3. Used to enter remote control SETUP
4. Remote controls the device related to whichever mode key was last pressed
5. Used for special functions that are displayed on your cable menus
6. Displays program GUIDE
7. Displays main cable MENU
8. Used in the program guide for PAGE and DAY navigation
9. Displays INFO for currently selected program
10. EXITS current menu and returns to current program
11. Controls and MUTES TV VOLUME
12. Displays a LIST of recorded programs
13. Controls PLAYBACK of live and recorded TV
14. Returns to LAST channel you were watching
15. Cycles through FAVORITE channels that are set on your cable box
16. Returns to LIVE TV
17. Used to SWAP DVR tuners

IF YOU HAVE TROUBLE WITH YOUR REMOTE:

- Press the mode key for the device you are using (DVD, Audio, TV or Cable)
- Always point remote directly at the receiver when you are using it.
- Make sure batteries (2 "AAA") are good. The Mode key will blink 5 times with each key press when batteries need replacement.

IF YOU HAVE TROUBLE WITH YOUR TV:

- Check all devices/cables to make sure each is properly connected and plugged in.
- Make sure your TV is turned to the proper output channel (3 or 4)
- Make sure when you change channels using the Channel Adjust button the TV mode indicator light should glow.

For more information regarding your service
give us a call or visit us online.

422.7500 | www.eplusbroadband.com